




# 1



## Kit 187022



DACIA Dokker, 4-dr Van, 12-  
 FORD Tourneo Connect, 5-dr Bus, 03-13  
 FORD Transit Connect, 4-dr Van, 03-13  
 MERCEDES Citan, 4-dr Van, 12-21  
 NISSAN Kubistar, 5-dr Van, 97-09



NISSAN NV250, 5-dr Van, 19-21  
 RENAULT Express 4-dr Van, 21-  
 RENAULT Kangoo, 5-dr Van, 97-07, 08-21  
 RENAULT Kangoo Maxi, 5-dr Van, 10-21




 + 
 
 = Max: 100 kg / 220 lbs  
 7 kg / 15,4 lbs


 + 
 
 = Max: 150 kg / 330 lbs  
 10,5 kg / 21,1 lbs

ISO 11154-E




Bring your life  
 thule.com




This kit is only for vehicles with fixpoint mounting.


**1**  
KIT




**Safety**




004 x4




019 x4

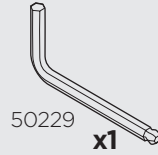

50229 x1






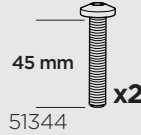




45 mm  
51344 x2

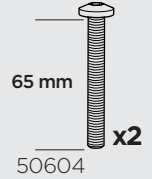


65 mm  
50604 x2

**i**

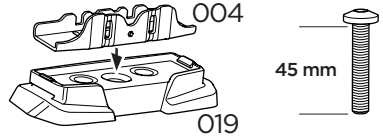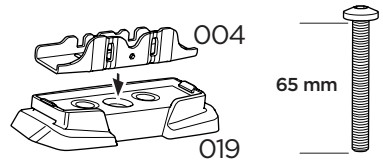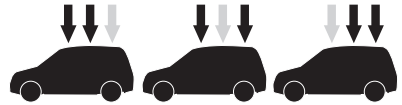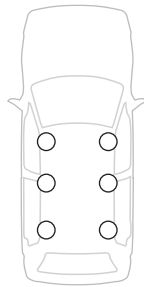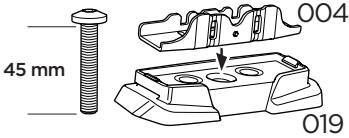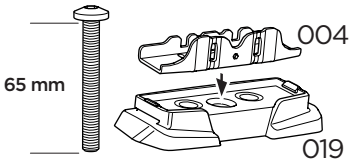


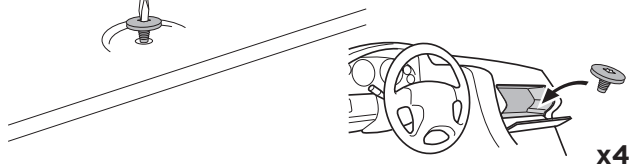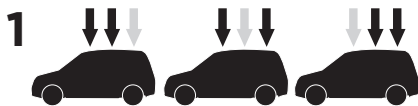


**2**

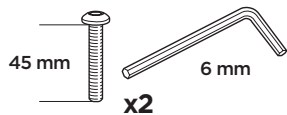




**8 Nm**

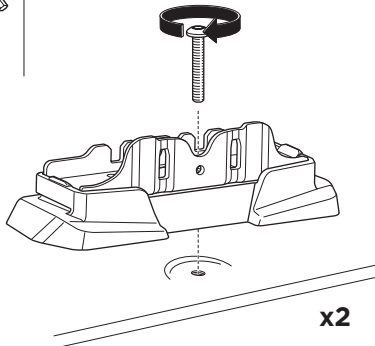

**3**

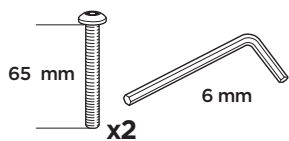






**8 Nm**

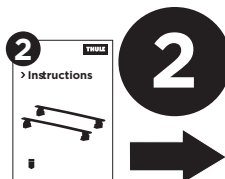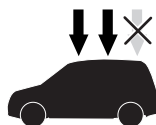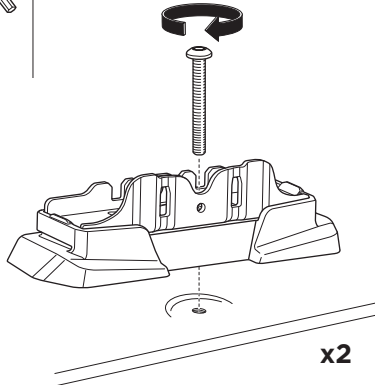


**DACIA Dokker, 4-dr Van, 12-  
RENAULT Express, 4-dr Van, 21-  
This kit is only for vehicles with fixpoint mounting.**



**1**  
KIT



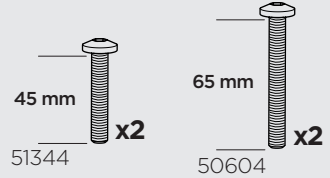
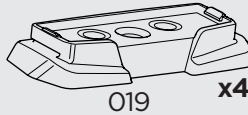

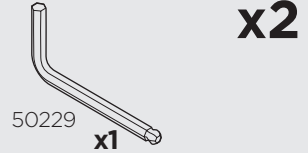





EXT.  
PAD

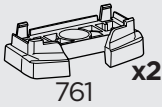



x2

**i**

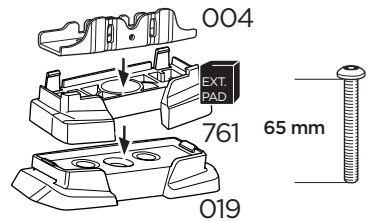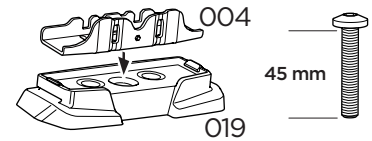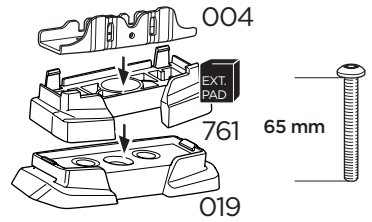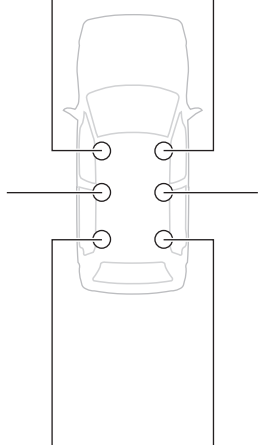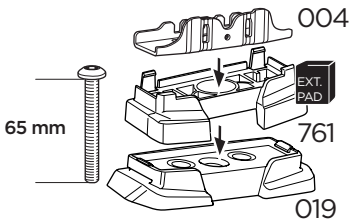
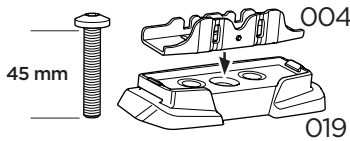
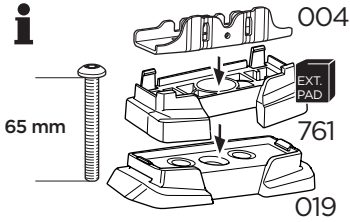


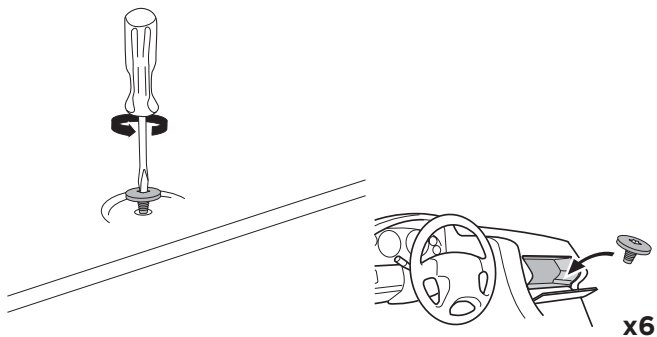

**2**

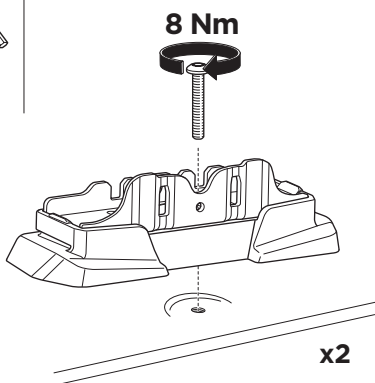

**3**

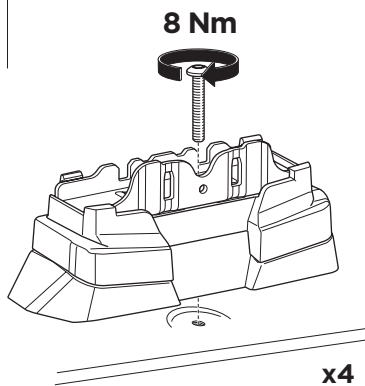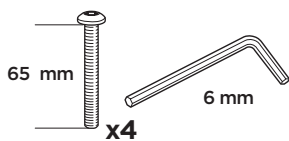



NISSAN NV250, 5-dr Van, 19-21

RENAULT Kangoo Maxi, 5-dr Van, 10-21




This kit is only for vehicles with fixpoint mounting.










**1**  
KIT

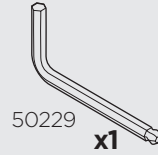


x2

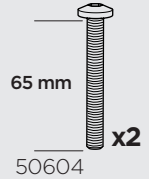




EXT.  
PAD

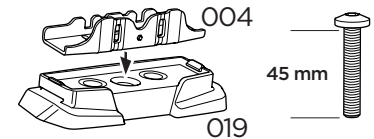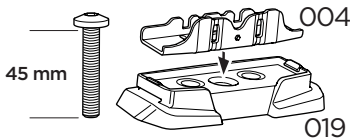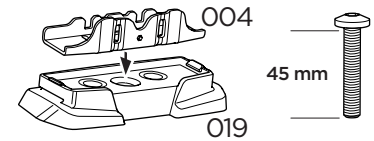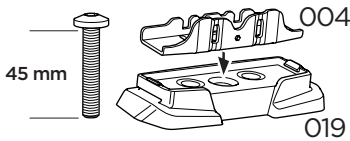
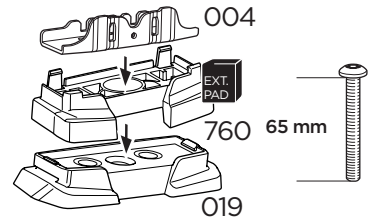
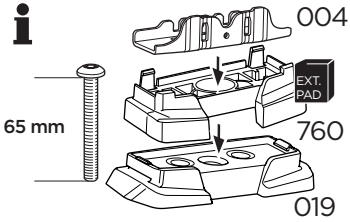
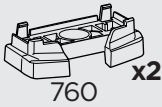



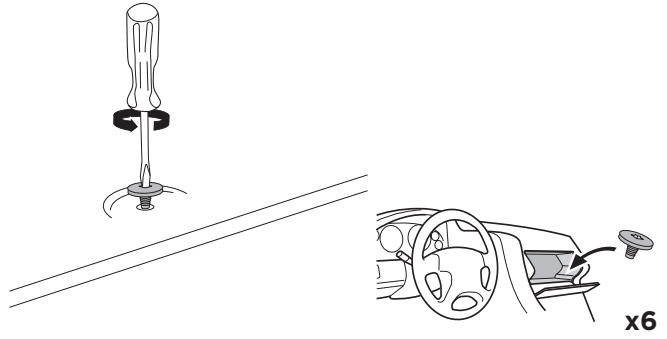


2

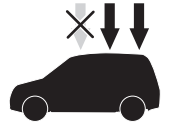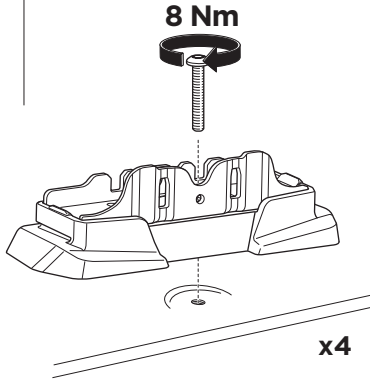



3

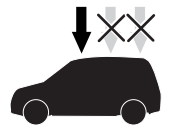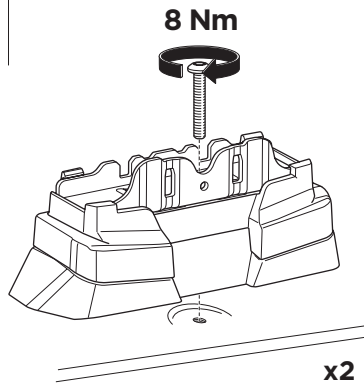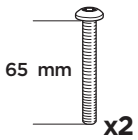

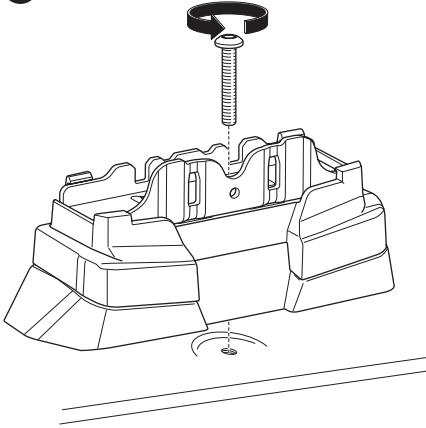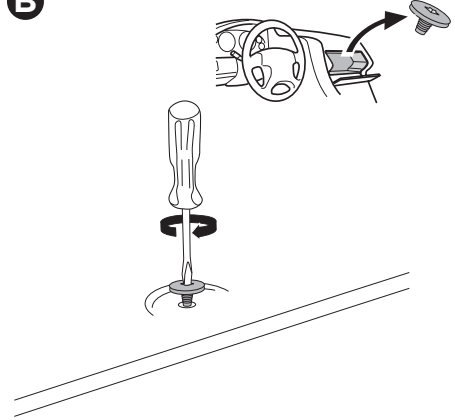**A****B**

**DACIA Dokker**, 4-dr Van, 12-  
**RENAULT Express**, 4-dr Van, 21-

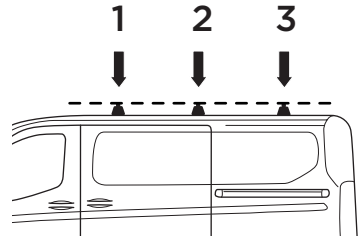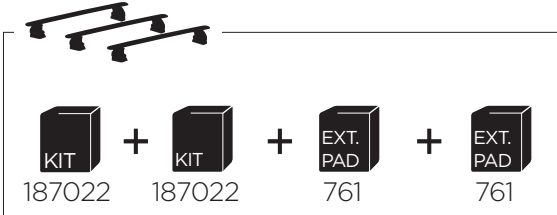

**NISSAN NV250**, 5-dr Van, 19-21  
**RENAULT Kangoo Maxi**, 5-dr Van, 10-21

