
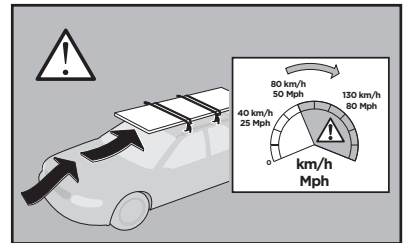
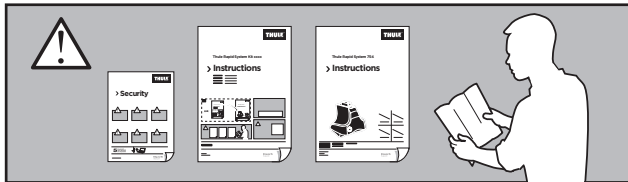
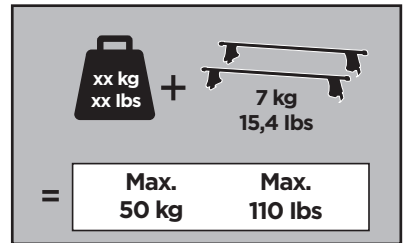


# Thule Rapid System Kit 1170

# > Instructions

LADA 110, 4-dr Sedan, 96-07

LADA 112, 5-dr Hatchback, 00-08

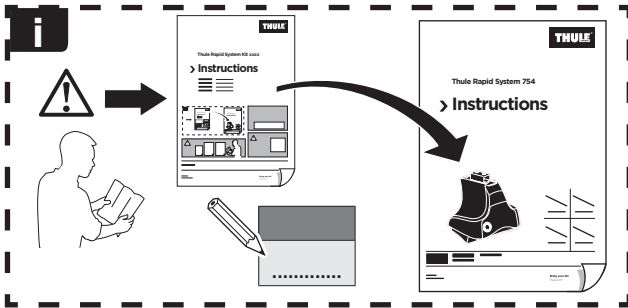


ISO 11154-E



16

x4




335

x4





x1



x1

1

	X (scale)	X (mm)	X (inch)
LADA 110, 4-dr Sedan, 96-07	22,5	876	34 1/2
LADA 112, 5-dr Hatchback, 00-08-	22,5	876	34 1/2

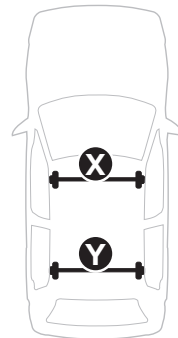
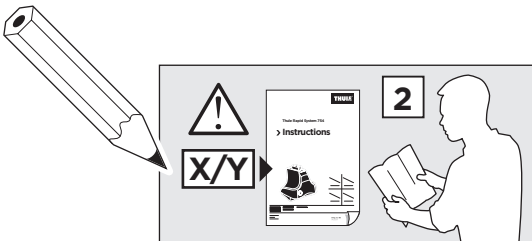




	Y (scale)	Y (mm)	Y (inch)
LADA 110, 4-dr Sedan, 96-07	20	851	33 1/2
LADA 112, 5-dr Hatchback, 00-08-	20	851	33 1/2

**2**

**LADA 110**, 4-dr Sedan, 96-07

**LADA 112**, 5-dr Hatchback, 00-08-

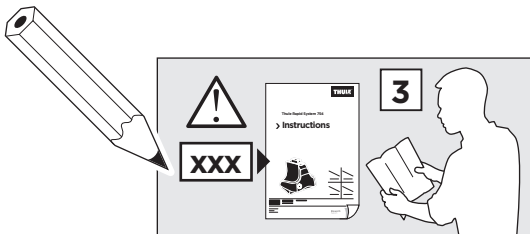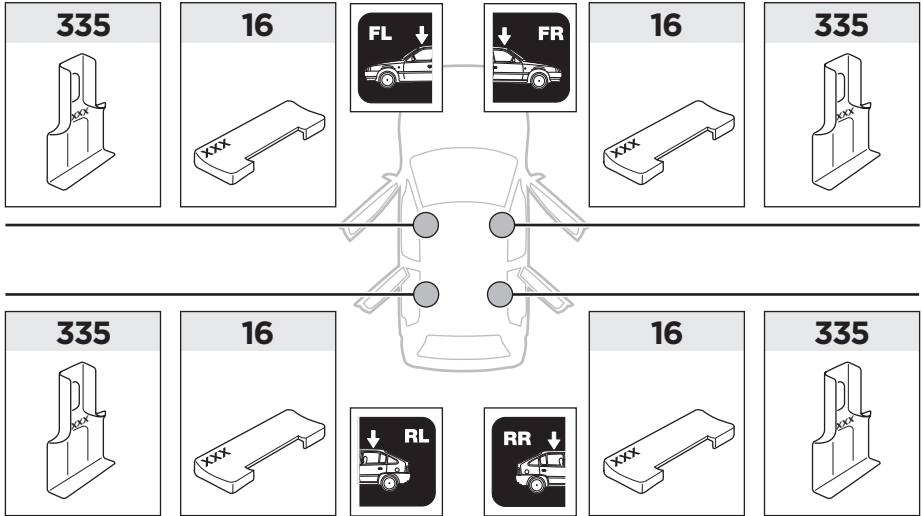

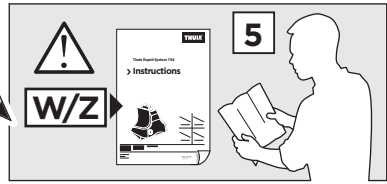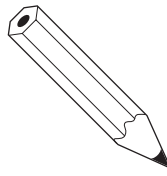**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>LADA 110</b> , 4-dr Sedan, 96-07	220	700	8 <sup>5</sup> / <sub>8</sub>	27 <sup>1</sup> / <sub>2</sub>
<b>LADA 112</b> , 5-dr Hatchback, 00-08-	220	700	8 <sup>5</sup> / <sub>8</sub>	27 <sup>1</sup> / <sub>2</sub>

