
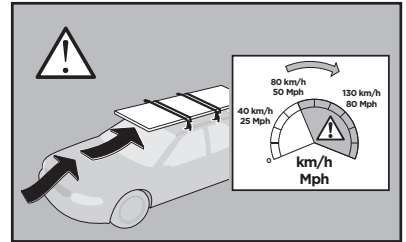
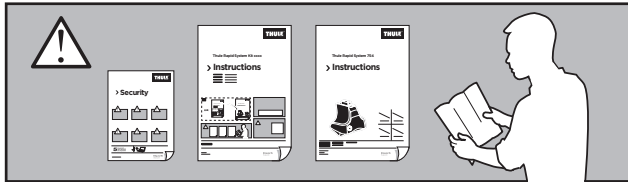
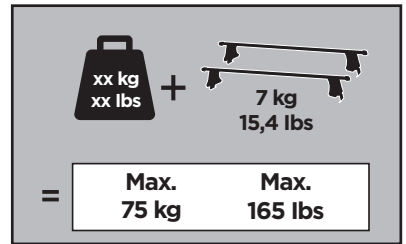


# Thule Rapid System Kit 1159

# > Instructions

**MAZDA Premacy, 5-dr MPV, 99-01, 02-04**

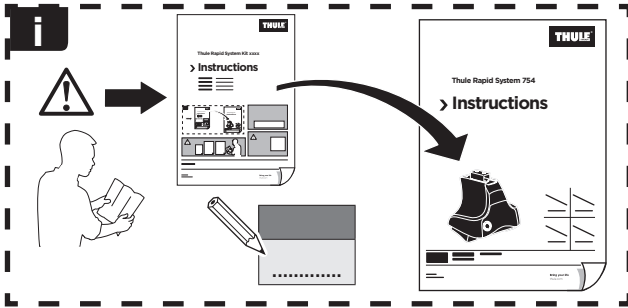

ISO 11154-E

**141159**


C.20130107  
519-1159-01

**Bring your life**

thule.com



03 x4




270 x2



x1






271 x2



x1

1



	X (scale)	X (mm)	X (inch)
MAZDA Premacy, 5-dr MPV, 99-01, 02-04	38	1031	40 <sup>5</sup> / <sub>8</sub>

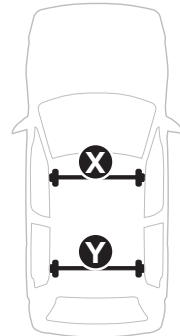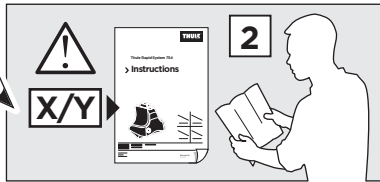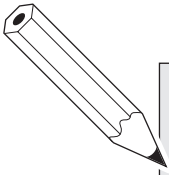



	Y (scale)	Y (mm)	Y (inch)
MAZDA Premacy, 5-dr MPV, 99-01, 02-04	34,5	996	39 <sup>1</sup> / <sub>4</sub>

2

MAZDA Premacy, 5-dr MPV, 99-01, 02-04

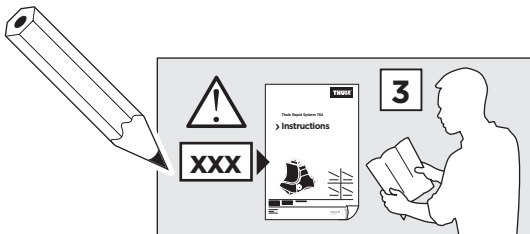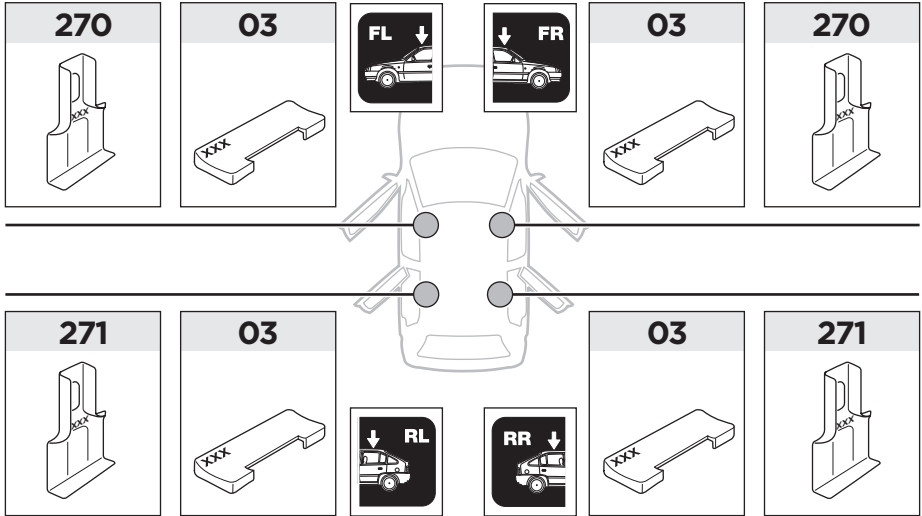

3

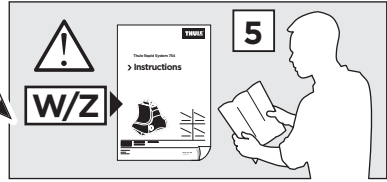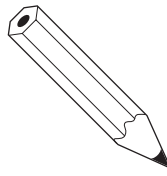

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>MAZDA Premacy</b> , 5-dr MPV, 99-01, 02-04	<b>400</b>	<b>700</b>	<b>15 <sup>3</sup>/<sub>4</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>

